

# Playhouse Additional Window



## Tools Needed:

- Cordless Drill (12V or higher)
- #2 square drive bit
- Hammer
- 6' step ladder
- Tape measure
- Square utility knife w/ blade & hook blade



*Little Cottage Co.  
PO Box 455  
Berlin, OH 44610  
330-893-4212*

© 2007 *Little Cottage Co.*

# Playhouse Additional Window



1



Install window frame where needed. Fasten with 1 1/2" block head screws.

2




Drill a hole in each corner for routing purpose.

3



This picture you can see the four drilled holes, one in each corner.

4

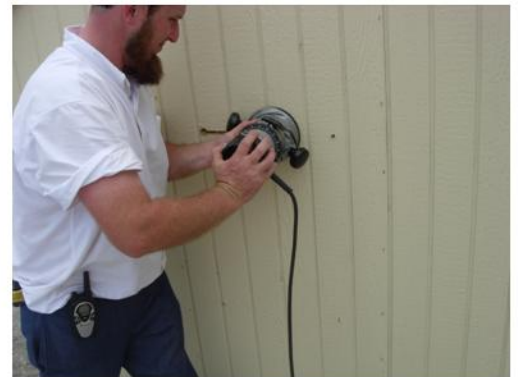


Use router or saw and cut out where drilled holes are.

5



Use router or saw and cut out where drilled holes are.

6

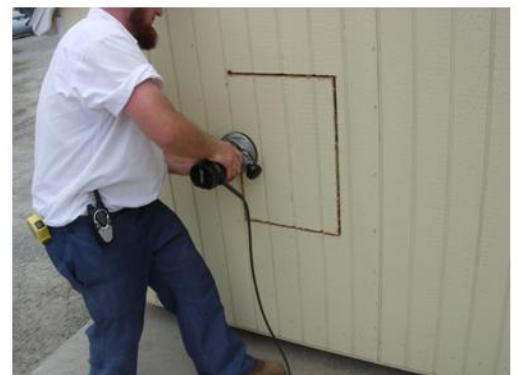

Continue routing for window opening.

# Playhouse Additional Window



7



Secure duratemp to 2x3 frame with 1 1/4" screws.

8



Install window.

9



Secure window with 1 1/4" screws as shown.

10



Install trim and secure with 1 1/4" trim